


1/4


*FIG. 1*

100

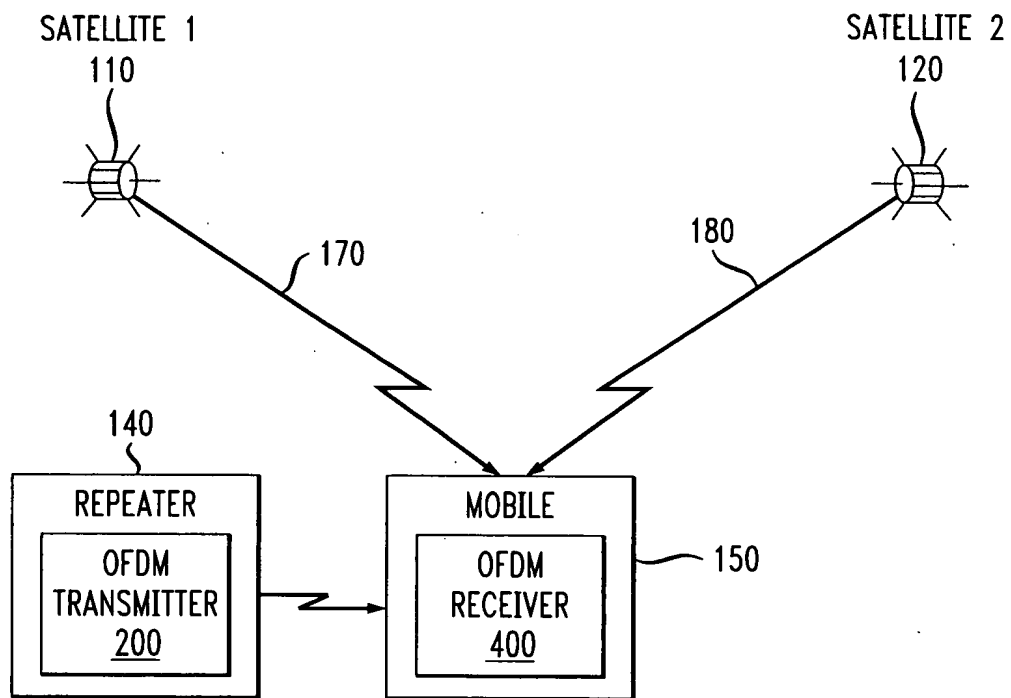

2/4

FIG. 2  
200

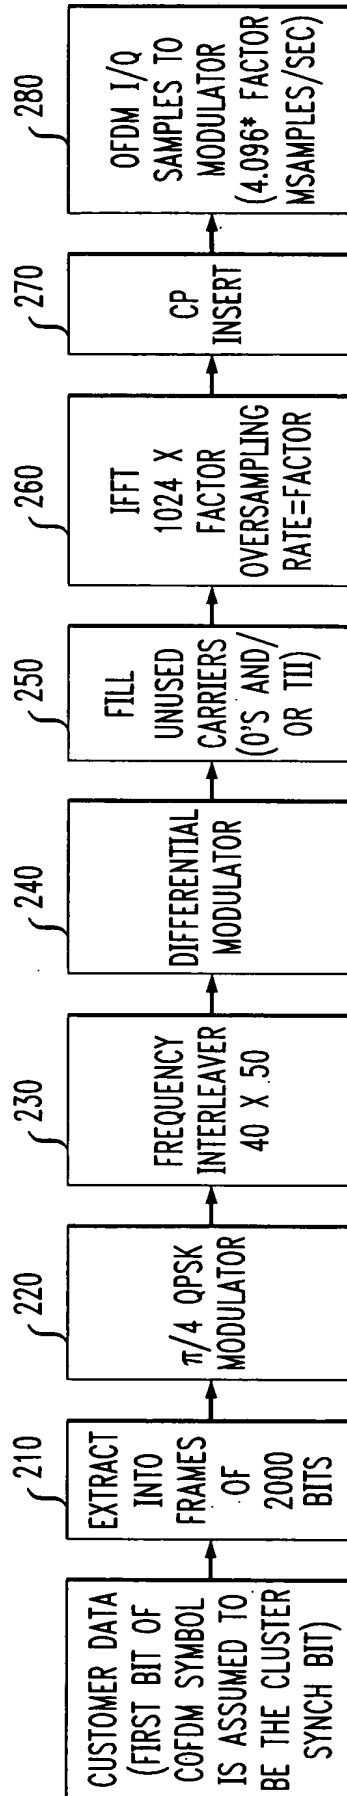

3/4

FIG. 3

300

FREQUENCY INTERLEAVER ENTRY MATRIX							
	COL 0	COL 1	COL 2	. . .	COL 29	COL 30	COL 31
ROW 0	I0	I1	I2	. . .	I29	I30	I31
ROW 1	I32	I33	I34	. . .	I61	I62	I63
ROW 2	I64	I65	I66	. . .	I93	I94	I95
⋮	⋮	⋮	⋮	. . .	⋮	⋮	⋮
ROW 31	I960	I961	I962	. . .	Q13	Q14	Q15
ROW 32	Q16	Q17	Q18	. . .	Q45	Q46	Q47
⋮	⋮	⋮	⋮	. . .	⋮	⋮	⋮
ROW 59	Q912	Q913	Q914	. . .	Q941	Q942	Q943
ROW 60	Q944	Q945	Q946	. . .	Q973	Q974	Q975

FIG. 4

400

